celsius

OIL COLUMN HEATER WITH TIMER

OPERATING INSTRUCTIONS

For Model: CELOH15T

WARNINGS AND SAFEGUARDS

1. Use only the voltage specified on the rating label of the appliance.
2. Keep all objects at least 1 metre from the front, sides and rear of the appliance. Do not place appliance close to radiant heat source.
3. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance. Do not sit on the appliance.
5. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
6. This appliance is intended for household use only and not for commercial or industrial use.
7. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electrical shock or injury.
8. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
9. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
10. Do not connect the appliance to mains supply until completely assembled and adjusted.
11. Switch off and use handles provided when moving.
12. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
13. Do not use an extension cord, powerboard, or external Timer with this unit.
14. Do not remove plug from power socket until the appliance has been switched off.
15. Do not remove plug from power socket by pulling cord; always grip plug.
16. Always unplug appliance when not in use.
17. Do not locate the heater directly below any power socket during operation.
18. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
20. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
21. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Celsius Customer Services Team.
22. If your appliance does not work, or is not working properly, contact the place of purchase or the Celsius Customer Services Team. Repair work on the appliance by unqualified persons can cause serious risk to the user.
23. There are no user serviceable parts installed in the unit.
24. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
25. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.
26. Indoor use only.
27. Children should be supervised to ensure that they do not play with the appliance.
28. Ensure heater is on a flat, stable, heat-resistant surface.
29. It is important that you do not cover this heater.

SUPPORT AND TECHNICAL ADVICE

Celsius – New Zealand
Monday – Friday 8am-5pm
Phone +64 (0)9 917 4000
Phone 0800 232 633
info@celsius.co.nz

Celsius – Australia
Monday – Friday 8am-5pm
Phone +61 (0)3 9336 4423
Phone 1300 465 324
info@celsius.co.nz

COMPONENTS

Main Body x1

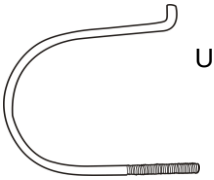

U-shape Bolt x1

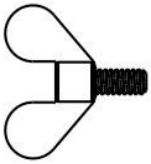

Screw x2

Wing Nut x1

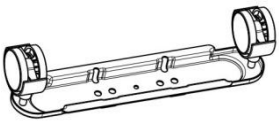

Wheel Castor x2

A. Main body
B. Handle
C. Adjustable thermostat
D. Heat control switch
E. Timer
F. Cable plate
G. Wheel assembly
H. Wheel

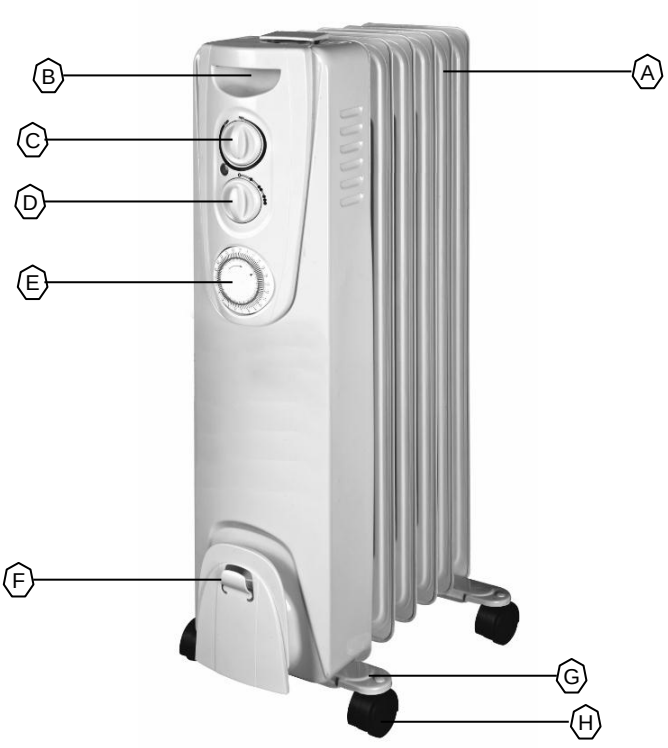

ASSEMBLY

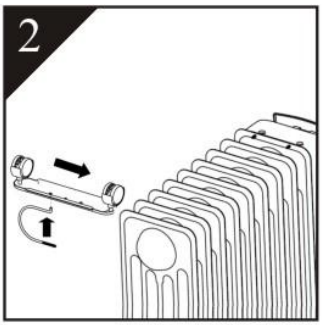

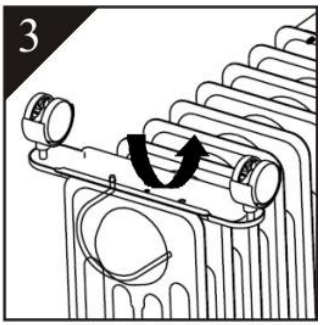

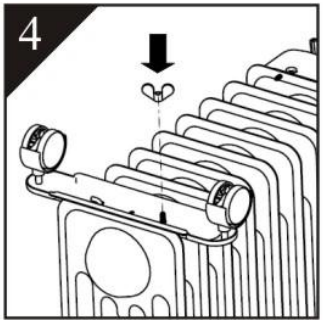

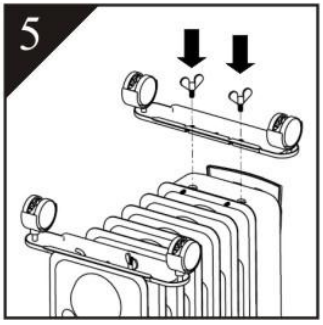

ASSEMBLY OF THE HEATER

Carefully turn the heater upside-down on a non-scratching and stable surface to prevent damage to the paint finish or your floor surfacing (Figure 1).

Fit the wheel castors onto the heater by placing the U-shaped bolt between the outermost fin away from the control side of the heater (Figure 2, 3).

Securely fasten the wheel castors to the heater by screwing the wing nuts onto the U-bolts (Figure 4).

Attach the second wheel castor at the bottom of the control panel, then securely fasten the wheel castor onto the heater with the two screws (Figure 5).

IMPORTANT: Please fit the wheel assemblies as per the diagram. Any other position may affect the stability of the heater.

WARNING: Only operate the heater in normal upright position with wheel assemblies attached to the bottom, any other position could create a hazardous situation.

OPERATING YOUR OIL COLUMN HEATER

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. This appliance requires no installation, it should be used solely as a portable appliance.

PLEASE NOTE: As this product is fitted with a Timer, the Timer has been set to the "ON" position. Please refer to the Timer section for setting instructions.

HEAT CONTROL SWITCH

The control switch positions are:

- ● Minimum heating
- ●● Medium heating
- ●●● Maximum heating

Check that the power On/Off switch is set to Off position before plugging the heater into the mains supply. For greater economy, use the High Heat setting initially and then switch to the Low Heat setting.

THERMOSTAT

Turn the thermostat knob clockwise until you reach the maximum temperature on the graduated scale. When the desired room temperature is reached, slowly turn the knob anti-clockwise until the heater turns off (you will hear a click). The heater will now cycle on and off to maintain the set temperature.

IMPORTANT! NEVER COVER THIS HEATER

SAFETY DEVICES

This appliance has three protection devices:
The first device will automatically turn the appliance off if the appliance is not in the appropriate operating position.
The second device automatically disconnects & reconnects the appliance at a pre-set temperature.
The third device disconnects the appliance permanently in case of overheating, by means of a thermal fuse (it is non resettable).

WARNING: Keep all objects at least 1 metre from the front, sides and rear of the appliance.

WARNING: Do not use this heater with a programmer, separate Timer, remote-control system or any other device that switches the heater on automatically.

CAUTION: The heater generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

TIMER

You must set the time prior to programming the Timer. To do this turn; the outer dial of the Timer in a clockwise direction until the time of the day (24-hour clock) corresponds with the triangular marking. Example if it is 2pm (1400 hours) then set the triangular mark in line with 14. One complete turn of the dial corresponds to 24 hours.
There are 96 “riders”, positioned around the dial, each rider represents 15 minutes.
Where all the “riders” are pushed to the outside of the Timer the heater will be ON continuously.
To set a specific time for example:
If you want the heater to be on from 6pm to 10pm, then set all the riders from 18 to 22 (1800 hours to 2200 hours) to the outside of the rim and all other riders to the inside of the Timer. The unit will then turn on automatically at 6pm and off again at 10pm.

WARNING: Take care in positioning your heater. Using the Timer will mean the heater will come on automatically. Fire may result if the heater has been placed next to combustible material.

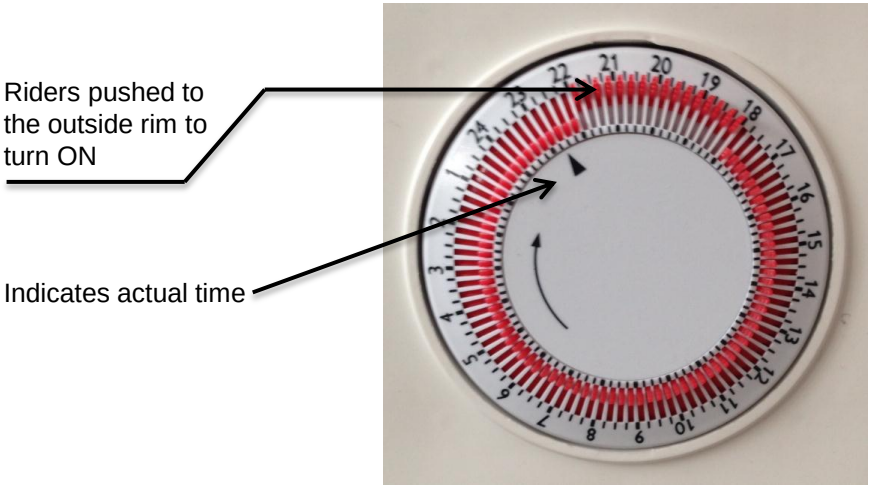

CARE AND CLEANING

The heater requires regular cleaning to ensure trouble free operation:
Unplug the heater from the mains supply before cleaning.
Ensure that the heater has been allowed to cool down completely before cleaning.
Use a damp cloth (not wet) to wipe the exterior of the heater to remove dust and dirt.
Never use solutions such as benzene, thinners or polishing agents.
Use a vacuum cleaner to remove dust and fluff from around the grills and fins.
Ensure the heater is dry before plugging back into the mains supply.

Do not attempt to dismantle the heater. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase.

TECHNICAL SPECIFICATION

Model No:	CELOH15TM
Supply:	220-240VAC 50Hz
Wattage:	1500W

One Year Warranty

Thank you for purchasing this Celsius product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **one year.** In non-domestic use Celsius limits the voluntary warranty to **three months.**

Celsius undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Celsius – New Zealand
PO Box 100-707
N.S.M.C
Auckland

Phone +64 (0)9 917 4000
Phone 0800 232 633
info@celsius.co.nz

Celsius – Australia
PO Box 574
South Morang
Victoria, 3752

Phone +61 (0)3 9336 4423
Phone 1300 465 324
info@celsius.co.nz

Celsius One Year Warranty (IMPORTANT: Please complete and retain this warranty card)

Name _____

_____

Address _____

_____

_____

_____

Place Of Purchase _____ Date Of Purchase _____

Name Of Product _____ Model Number _____

Attach a copy of the purchase receipt to this warranty card

Due to continual design improvements, the product illustrated in this User Manual may differ slightly from the actual product.